# TMS320DM644x DVEVM Windows CE v5.0 BSP DSP/BIOS LINK

# **User's Guide**

Literature Number: SPRUEW0 March 2007



### Contents

	Trademarks	. 5
Prefa	e	. 6
1	Distribution	. 8
1.1	Distribution Contents	
1.2	Contents of DSP/BIOS™ LINK	. 9
2	Mininum System Requirements	10
2.1	Hardware	
	2.1.1 Development/Debug Host Machine	10
2.2	Software	
	2.2.1 Generic Software Requirement	10
	2.2.2 Platform Specific Software Requirements for DaVinci EVM	10
3	DSP/BIOS Link Usage	11
3.1	WinCE Platform Configurations for DSP/BIOS LINK	11
	3.1.1 Config.bib	11
	3.1.2 Platform.bib	11
	3.1.3 Platform.reg	12
4	Sample Applications	13
4.1	Loop Sample	13
	4.1.1 Invoking the Application	13
4.2	Message Sample	14
	4.2.1 Invoking the Application	15
4.3	Scale Sample	15
	4.3.1 Invoking the Application	16
4.4	READWRITE Sample	16
	4.4.1 Invoking the Application	17

### List of Figures

1-1	DSP/BIOS LINK Distribution Folder	8
4-1	Data Flow in the Sample Application – LOOP	
4-2	Execution of Loop.exe in Platform Builder	14
4-3	Message Flow in the Sample Application - MESSAGE	15
4-4	Data and Message Flow in the Sample Application – SCALE	
4-5	Data and Message Flow in the Sample Application – READWRITE	17
4-6	Execution of Readwritegpp.exe From the Platform Builder	

### List of Tables

1	Terms, Acronyms, and Descriptions	6
1-1	Distribution Tree	9

#### Trademarks

DaVinci, DSP/BIOS are trademarks of Texas Instruments.

Windows, Microsoft are registered trademarks of Microsoft Corporation in the United States and/or other countries.



Preface SPRUEW0-March 2007

#### About This Manual

This document accompanies the release of Windows® CE 5.0 BSP for DaVinci™ evaluation module (EVM) board.

#### **Purpose and Scope**

This document describes the usage of the DSP/BIOS<sup>™</sup> LINK binaries provided along with the Windows CE 5.00 BSP for the DaVinci EVM platform, information on the DSP LINK binaries released, and the procedure to integrate them in a given Windows CE image.

#### **Notational Conventions**

This document uses the following conventions.

- Backward slashes are used as pathname delimiters for filenames.
- Catalog->Third Party refers to the Catalog Window Tree Items in the Platform Builder IDE.
- All the shell commands are in courier new font.
- Menu commands are depicted using the following notation *menu name > menu command*.

#### Terms, Abbreviations, and Descriptions

Number	Term	Description
1	BIB	Binary Image Builder
2	BSP	Board Support Package
3	CHIRP	Channel I/O Request Packets
4	CHNL	Channel
5	EVM	Evaluation Module
6	GIO	General Input Output
7	GPP	General Purpose Processor
8	LDRV	Link Driver
9	OSAL	OS Abstraction Layer
10	PCPY	Processor Copy Driver
11	PROC	Processor
12	SHMIPS	Shared Memory Inter-processor Signaling
13	SIO	Streaming Input Output
14	SMA	Shared Memory Allocator
15	SWI	Software Interrupt
16	TSK	Task
17	ZCPY	Zero Copy Driver

#### Table 1. Terms, Acronyms, and Descriptions



#### **Related Documentation from Texas Instruments**

The following documents describe the DVEVM Windows CE v5.0 BSP.

#### SPRUEV9 — TMS320DM644x DVEVM Windows CE v5.0 BSP Codec Engine Users Guide.

Provides information about the release contents of Windows CE 5.0 BSP for DaVinci-based DVEVM. The document illustrates various components that are part of this release, the procedure to install this release on to the host system, and the limitations of the release.

#### SPRUEW1 — TMS320DM644x DVEVM Windows CE v5.0 BSP Bootloader Users Guide.

Provides information about the Windows CE 5.0 bootloader for DaVinci EVM. The document illustrates various features and the build and flash procedures.

#### SPRUEW0 — TMS320DM644x DVEVM Windows CE v5.0 BSP DSP/BIOS Link Users Guide.

Describes the usage of the DSP/BIOS Link binaries provided along with the Windows CE 5.00 BSP for the Davinci EVM platform and the integration procedures in a given Windows CE image.

#### SPRUEV8 — TMS320DM644x DVEVM Windows CE v5.0 Codec Engine Binary Users Guide

Provides information on the build procedure for the codec engine samples on Windows CE 5.0 platform.

#### SPRS283 — TMS320DM6446 Digital Media System-on-Chip Data Manual (SPRS283)

The TMS320DM6446 (also referenced as DM6446) leverages TI's DaVinci<sup>™</sup> technology to meet the networked media encode and decode application processing needs of next-generation embedded devices.



### Distribution

DSP/BIOS<sup>™</sup> LINK is foundation software for inter-processor communication across the GPP DSP boundary. It provides a generic API that abstracts the characteristics of the physical link connecting GPP and DSP from the applications. This release contains the binaries of the DSP/BIOS LINK drivers and samples showing the usage of DSP/BIOS LINK APIs.

#### **1.1 Distribution Contents**

The DSP/BIOS LINK binaries are bundled along with the Davinci EVM Windows CE 5.00 BSP. The layout of the DSP/BIOS LINK distribution is shown in Figure 1-1

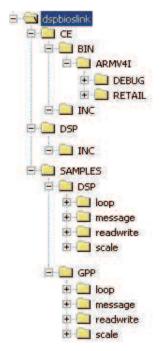


Figure 1-1. DSP/BIOS LINK Distribution Folder

PATH	FILES
DSP/BIOSLINK\CE\BIN\ARMV4I\ [DEBUG   RETAIL] DEBUG and RETAIL versions of the DSP/BIOS LINK DLLs are placed in this folder.	dspbioslink.dll dspbioslink.exp dspbioslink.lib dspbioslink.rel
DSP/BIOSLINK\SAMPLES\DSP The DSP side samples are copied into this folder	loop.out message.out readwrite.out scale.out
DSPBIOSLINK\SAMPLES\DSP\LOOP	Contains the LOOP Sample DSP source code
DSPBIOSLINK\SAMPLES\DSP\MESSAGE	Contains the MESSAGE Sample DSP source code
DSPBIOSLINK\SAMPLES\DSP\READWRITE	Contains the READWRITE Sample DSP source code
DSPBIOSLINK\SAMPLES\DSP\SCALE	Contains the SCALE Sample DSP source code
DSPBIOSLINK\SAMPLES\GPP\LOOP	Contains the LOOP Sample GPP source code
DSPBIOSLINK\SAMPLES\GPP\MESSAGE	Contains the MESSAGE Sample GPP source code
DSPBIOSLINK\SAMPLES\GPP\READWRITE	Contains the READWRITE Sample GPP source code
DSPBIOSLINK\SAMPLES\GPP\SCALE	Contains the SCALE Sample GPP source code
DSPBIOSLINK	Contains the Windows CE Registry Entries for the selected DSPLINK Configuration specific to DaVinci

#### Table 1-1. Distribution Tree

#### 1.2 Contents of DSP/BIOS<sup>™</sup> LINK

The binary release of DSP/BIOS<sup>™</sup> software kernel foundation LINK contains the following:

- Binary DLLs for DSP/BIOS LINK PMGR and DSP/BIOS LINK API modules
- Sample program to test the CHNL, PROC and MSGQ APIs provided by DSP/BIOS LINK.
- DSP Image executables used by the DSPLINK sample programs.



## Mininum System Requirements

This section includes the system requirements for integrating LINK binaries and executing the LINK samples.

#### 2.1 Hardware

The following are the target requirements to test and run this software:

- DaVinci EVM board, Rev-D
- Standard RS232 serial port for loader communications.
- Any Ethernet adapter for the host platform to support Ethernet download/debug/retail connectivity (optional). A local area network (LAN) hub is recommended.
- Serial cable
- Ethernet cable

#### 2.1.1 Development/Debug Host Machine

The following are the requirements for the DSPLINK for Windows CE. All requirements are for the host machine unless otherwise noted.

- 500MHz Pentium II processor or higher; 1GHz recommended.
- Microsoft®Windows®2000 Professional with Service Pack 2 (SP2) or Windows XP Professional.
- 256MB of RAM
- Microsoft Windows CE 5.0 Platform Builder
- 250MB of free disk space
- At least 300MB of additional disk space to build the image

#### 2.2 Software

#### 2.2.1 Generic Software Requirement

- Platform Builder for Windows CE 5.0 with all the patches installed
- Tera Term (or any other serial port emulation program)

#### 2.2.2 Platform Specific Software Requirements for DaVinci EVM

- Windows CE 5.0 BSP for the DaVinci EVM board containing the DSPLINK binaries.
- CCS 3.2 IDE (if DSP-side development/debugging is required)

SPRUEW0-March 2007



## DSP/BIOS Link Usage

This section provides information on how to integrate the DSP LINK binaries into the Windows CE image and exercise the DSP LINK samples.

#### 3.1 WinCE Platform Configurations for DSP/BIOS LINK

The following modifications are required in the Platform configuration files for the integration of DSP/BIOS LINK into the Windows CE OS Image.

#### 3.1.1 Config.bib

The config.bib present in \$(\_WINCEROOT)\PLATFORM\<BSP\_FOLDER>\FILES needs to have the entries related to the DSP/BIOS LINK usage.

The below shows a sample setting to be added to the MEMORY section of the config.bib

DSPMEMO 8FE00000 00100000 RESERVED ;; DSPLINK Entry 0 - 1024 KB DSPMEM1 8FF00000 0000080 RESERVED ;; DSPLINK Entry 1 - 128 Bytes DSPMEM2 8FF00080 000FFF80 RESERVED ;; DSPLINK Entry 2 - 1023 KB

The address identified above is fixed and cannot be changed for binary release of the DSP/BIOS LINK.

Please note that the SDRAM Address ranges [0x8FE00000, 0x8FF00000 and 0x8FF00080] are specific to the DaVinci EVM platform and may have to be updated if DSP/BIOS LINK needs to be integrated into a custom Windows CE BSP.

#### 3.1.2 Platform.bib

The platform.bib present in (\_WINCEROOT)\PLATFORM\<BSP\_FOLDER>\FILES needs to have the entries related to the DSP/BIOS LINK.

SH

SH

The following shows the sample setting to be added to the MODULES section of the platform.bib

```
IF BSP_DSPBIOSLINK
dsplinkapi.dll $(_FLATRELEASEDIR)\dsplinkapi.dll NK
dspbioslink.dll $(_FLATRELEASEDIR)\dspbioslink.dll NK
```

ENDIF ;;BSP\_DSPBIOSLINK

The following shows the sample setting to be added to the FILES section of the platform.bib

IF BSP\_DSPBIOSLINK

loopgpp.exe	<pre>\$(_FLATRELEASEDIR)\loopgpp.exe \$(_FLATRELEASEDIR)\messagegpp.exe \$(_FLATRELEASEDIR)\readwritegpp.exe</pre>	NK	S
messagegpp.exe		NK	S
readwritegpp.exe		NK	S
loop.out message.out readwrite.out scale.out	<pre>\$(_FLATRELEASEDIR)\loop.out \$(_FLATRELEASEDIR)\message.out \$(_FLATRELEASEDIR)\readwrite.out \$(_FLATRELEASEDIR)\scale.out</pre>	NK NK NK	

Note:



ENDIF ;; BSP\_DSPBIOSLINK

#### 3.1.3 Platform.reg

The platform.reg present in (\_WINCEROOT)\PLATFORM\<BSP\_FOLDER>\FILES must have the entries related to DSP/BIOS LINK.

The code below shows the sample setting to be added to platform.reg

IF BSP\_DSPBIOSLINK
#include "\$(\_TARGETPLATROOT)\Src\drivers\dspbioslink\dspbioslink.reg"
ENDIF ;; BSP\_DSPBIOSLINK

This setting ensures that the registry entries from the dspbioslink.reg are merged into the reginit.ini of the platform builder workspace when built.



## Sample Applications

This section provides basic information and examples for the various sample applications, as well as code used to invoke the sample applications.

#### 4.1 Loop Sample

Figure 4-1 illustrates basic data streaming concepts in DSP/BIOS LINK. It transfers data between a task running on GPP and another task running on the DSP. On the DSP side, this application illustrates use of TSK with SIO and SWI with GIO.

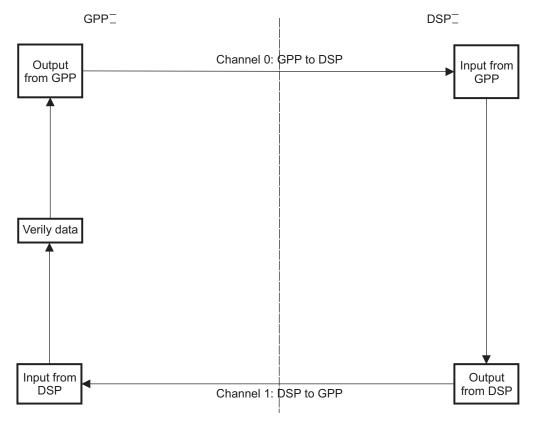


Figure 4-1. Data Flow in the Sample Application – LOOP

#### 4.1.1 Invoking the Application

The loop sample takes the following parameters:



Parameter	Example Value	
Absolute path of DSP executable	windows\loop.out	
Buffer size	1024	
Number of iterations	10000	

The sample can be executed for infinite iterations by specifying the number of iterations as 0. The following example initiates the loop sample application to run for 5000 iterations each transferring a buffer of size 2048 bytes.

Windows CE>s loopgpp.exe windows\loop.out 2048 5000

Figure 4-2 shows a snapshot of the loop sample application execution in Platform Builder IDE.

OVEVMDSPLINKTEST - Platform Builder [run]		- 🗆 ×
File Edit View Project Platform Target Build Project B	uild OS <u>D</u> ebug <u>T</u> ools <u>W</u> indow <u>H</u> elp	
1 2 2 4 <b>6</b> 1 1 <b>6 6</b> 2 • 2 • <b>6</b>	🗟 🗊 😤 🍇 MPBUF_Delete 🗾 🏄	
Davinci: ARMV4I_Release		÷
DVEVM	i 🖭   G O 🖻 🖻 🌀	
□ 🕰 🗔   → P) IP (P *0   Ar   💭 💭 🖂	다 다 정 주 한 전 🐼 🔯 🔁	
Windows CE>s loopgpp.exe windows∖loop. Windows CE>	out 2048 5000	<u>*</u>
▲ Entering DSPAPI_D11Entry		<u>ب</u>
Leaving DSPAPI_DllEntry Command-line Parms: windows\loop.out main: argc = 4 =============== Sample Application : DSPExec: windows\loop.out DSPBufferSize: %00 Iterations: 1388 Entered LOOP_Create () LOOP:Create Received Buffer 0x71000.		
LOOP:Wrote 0xFFFFFE7 Char into the Leaving LOOP_Create () Entered LOOP_Execute () Transferred 1000 buffers Transferred 2000 buffers		<u>.</u>
Ready	Ln 18, Col 25   REC   COL   OVR   READ   Size: ~1757 KB	

Figure 4-2. Execution of Loop.exe in Platform Builder

#### 4.2 Message Sample

Figure 4-3 illustrates basic message transferring concepts in DSP/BIOS LINK. It transfers messages between a task running on GPP and another task running on the DSP. On the DSP side, this application illustrates use of TSK and SWI with MSGQ.

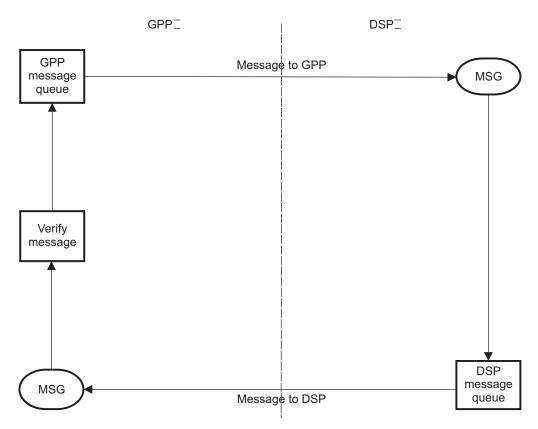


Figure 4-3. Message Flow in the Sample Application - MESSAGE

#### 4.2.1 Invoking the Application

The message sample takes the following parameters:


Parameter	Example Value
Absolute path of DSP executable	windows\message.out
Number of iterations	10000

The sample can be executed for infinite iterations by specifying the number of iterations as 0. The following example initiates the message sample application to run for 6000 iterations.

Windows CE>s messagegpp.exe windows\message.out 6000

#### 4.3 Scale Sample

Figure 4-4 illustrates a combination of data streaming and messaging concepts in DSP/BIOS LINK. It transfers data between a task running on GPP and another task running on the DSP, and sends messages from GPP to DSP. On the DSP side, this application illustrates use of TSK with SIO and MSGQ, and SWI with GIO and MSGQ.

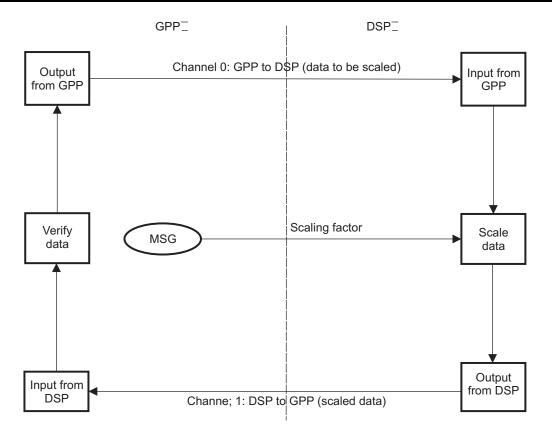

#### Figure 4-4. Data and Message Flow in the Sample Application – SCALE

#### 4.3.1 Invoking the Application

The scale sample takes the following parameters:


Parameter	Example Value	
Absolute path of DSP executable	windows\scale.out	
Buffer size	1024	
Number of iterations	10000	

The sample can be executed for infinite iterations by specifying the number of iterations as 0. The following example initiates the scale sample application to run for 8000 iterations with each transferring a buffer of size 1024 bytes.

Windows CE>s scalegpp.exe windows\scale.out 1024 8000

#### 4.4 **READWRITE Sample**

Figure 4-5 illustrates large buffer transfer through direct writes to and reads from DSP memory. It transfers a large size data buffer between the GPP and DSP using PROC\_Read () and PROC\_Write () APIs and tasks running on the DSP On the DSP side, this application illustrates use of TSK with MSGQ.

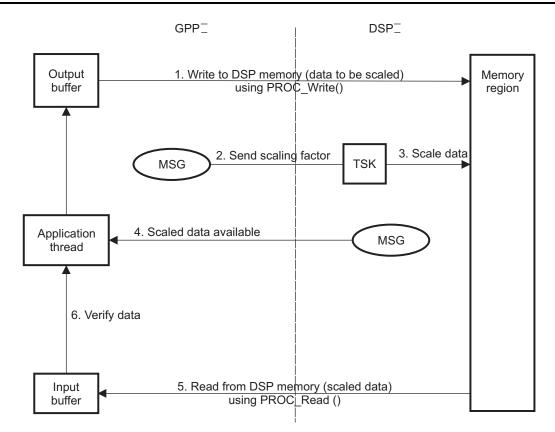

#### Figure 4-5. Data and Message Flow in the Sample Application – READWRITE

#### 4.4.1 Invoking the Application

Parameter	Example Value
Absolute path of DSP executable	windows\readwrite.out
DSP address	2414804992
Buffer size	1024
Number of iterations	10000

The sample can be executed for infinite iterations by specifying the number of iterations as 0.

The DSP address mentioned above is for the DaVinci platform. This needs to be specified as a valid DSP address for all platforms. The following example initiates the readwrite sample application to run for 4000 iterations with each transferring a buffer of size 1024 bytes.

Windows CE>s readwritegpp.exe windows\readwrite.out 2414804992 1024 4000

Figure 4-6 shows the snapshot of the Platform Builder IDE where the readwritegpp.exe is being executed for 1000 iterations.



READWRITE Sample

OVEVMDSPLINKTEST - Platform Builder [run]	
File Edit View Project Platform Target Build Project B	uild OS Debug Tools Window Help
🖀 😹 🖬 🕺 🗞 📭 🖻 🗠 🗠 × 🗔 🗊	🗟 🗊 🚰 🎭 MPBUF_Delete 💽 🚱
Davinci: ARMV4I_Release	
DVEVM	i 🖭 (3 6) 🖻 🖻 🐔
🗅 🕰 🗅   + P) TP (P *)   &   💭 💭 📼	
	الخلي
Windows CE>s loopgpp.exe windows\loop. Windows CE>	out 2048 5000
<pre>Main Section Section 2 Section</pre>	5756-745
DSPExec: windows\loop.out DSPBufferSize: 800 Iterations: 1388 Entered LOOP_Create ()	
LOOP:Create Received Buffer 0x71000. LOOP:Wrote 0xFFFFFE7 Char into the Leaving LOOP_Create () Entered LOOP Execute ()	Above Buffer.
Transferred 1000 buffers Transferred 2000 buffers Build Debug (Log ) Find in File	×
Ready	Ln 18, Col 25 REC COL OVR READ Size: ~1757 KB 🌆 💻

Figure 4-6. Execution of Readwritegpp.exe From the Platform Builder

#### **IMPORTANT NOTICE**

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products		Applications	
Amplifiers	amplifier.ti.com	Audio	www.ti.com/audio
Data Converters	dataconverter.ti.com	Automotive	www.ti.com/automotive
DSP	dsp.ti.com	Broadband	www.ti.com/broadband
Interface	interface.ti.com	Digital Control	www.ti.com/digitalcontrol
Logic	logic.ti.com	Military	www.ti.com/military
Power Mgmt	power.ti.com	Optical Networking	www.ti.com/opticalnetwork
Microcontrollers	microcontroller.ti.com	Security	www.ti.com/security
Low Power Wireless	www.ti.com/lpw	Telephony	www.ti.com/telephony
		Video & Imaging	www.ti.com/video
		Wireless	www.ti.com/wireless

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2007, Texas Instruments Incorporated